


ASSEMBLY INSTRUCTIONS:

1. ATTACH THE SEAT PORTION OF THE BENCH TO THE FRAMES, USING 5/16" BOLT ASSEMBLIES. THE FRAMES WILL ATTACH INSIDE THE SEAT BRACES. HAND-TIGHTEN BOLTS TO ALLOW FOR ADJUSTMENTS, AS NEEDED.
2. ATTACH THE BACK PORTION (WHICH IS THE SAME AS THE SEAT) TO THE FRAMES INSIDE THE SEAT BRACES.
3. TIGHTEN ALL BOLTS FULLY, DO NOT OVER-TIGHTEN.
4. ASSEMBLY MUST BE SET IN CONCRETE.



PARTS LIST:

- 2 - 6' SEATS
- 2 - B EXT FRAMES
- 1 - BAG OF "A" HARDWARE
 - 8 - 1 1/2" X 5/16" BOLTS
 - 16 - 5/16" FLAT WASHERS
 - 8 - 5/16" LOCK WASHERS
 - 8 - 5/16" NUTS

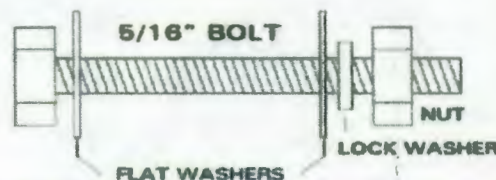

PLEASE CALL 1-800-356-7248 (MON - FRI 8am - 5pm CST) WITH ANY ASSEMBLY QUESTIONS.

DMF	6' PARK BENCH - SPEC SHEET
4/9/2009	EB61
	DIVERSIFIED METAL FABRICATORS, INC.
	(816) 532 0352 (816) 532 3982
EB61-09.OVV	SMITHVILLE MO 64089